Accessories Diagram PPC-04/06/08/12

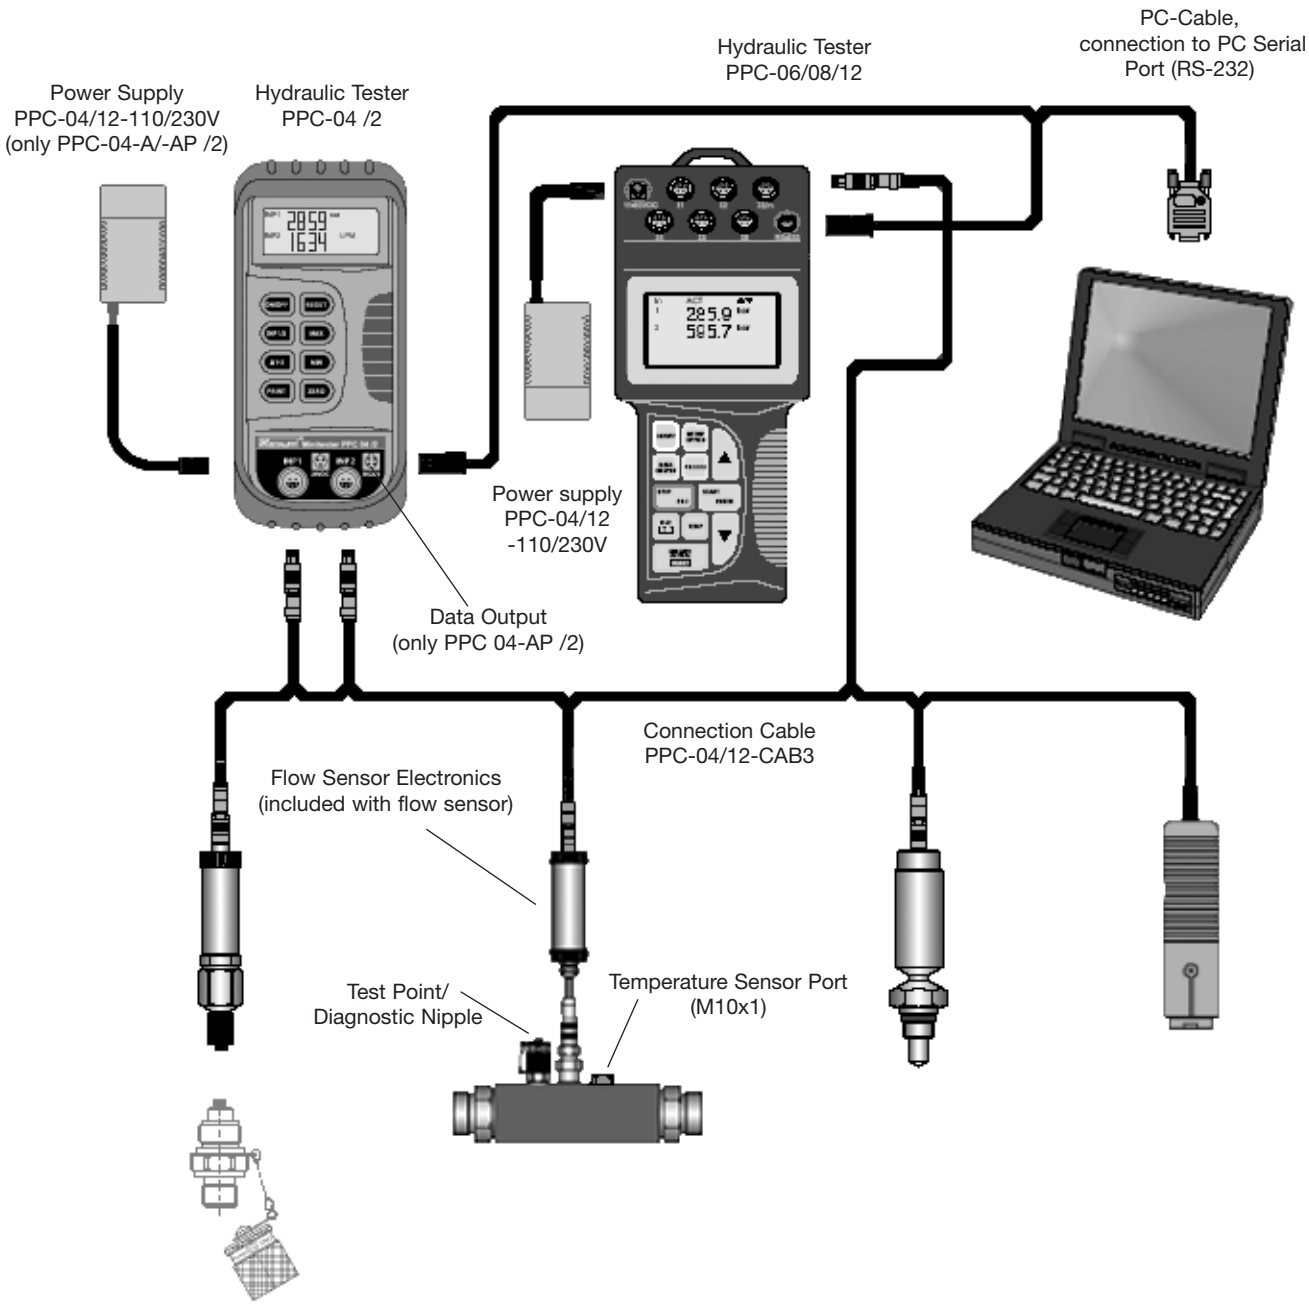

Pressure:
Sensor
PPC-04/12-PT-XXX,
more connection-adapters
available (SDA,SAD)

Flow:
Flow Meter
PPC-04/12-SFM-XXX

Temperature:
Sensor
PPC-04/12-TS,
for use with adapters
(SGV-J3/4-G)

Rotational Speed:
Sensor
PPC-04/12-SDS